

PARTS LIST

BF50R

CONTENTS


1. MAIN BODY	1 ~ 4
2. GEARCASE.....	5 ~ 6
3. ENGINE	7 ~ 10
4. CARBURETOR, FUEL TANK	11 ~ 14
5. ACCESSORIES	15 ~ 16

2013. 01.




P/N 523551

1. BF50R
MAIN BODY

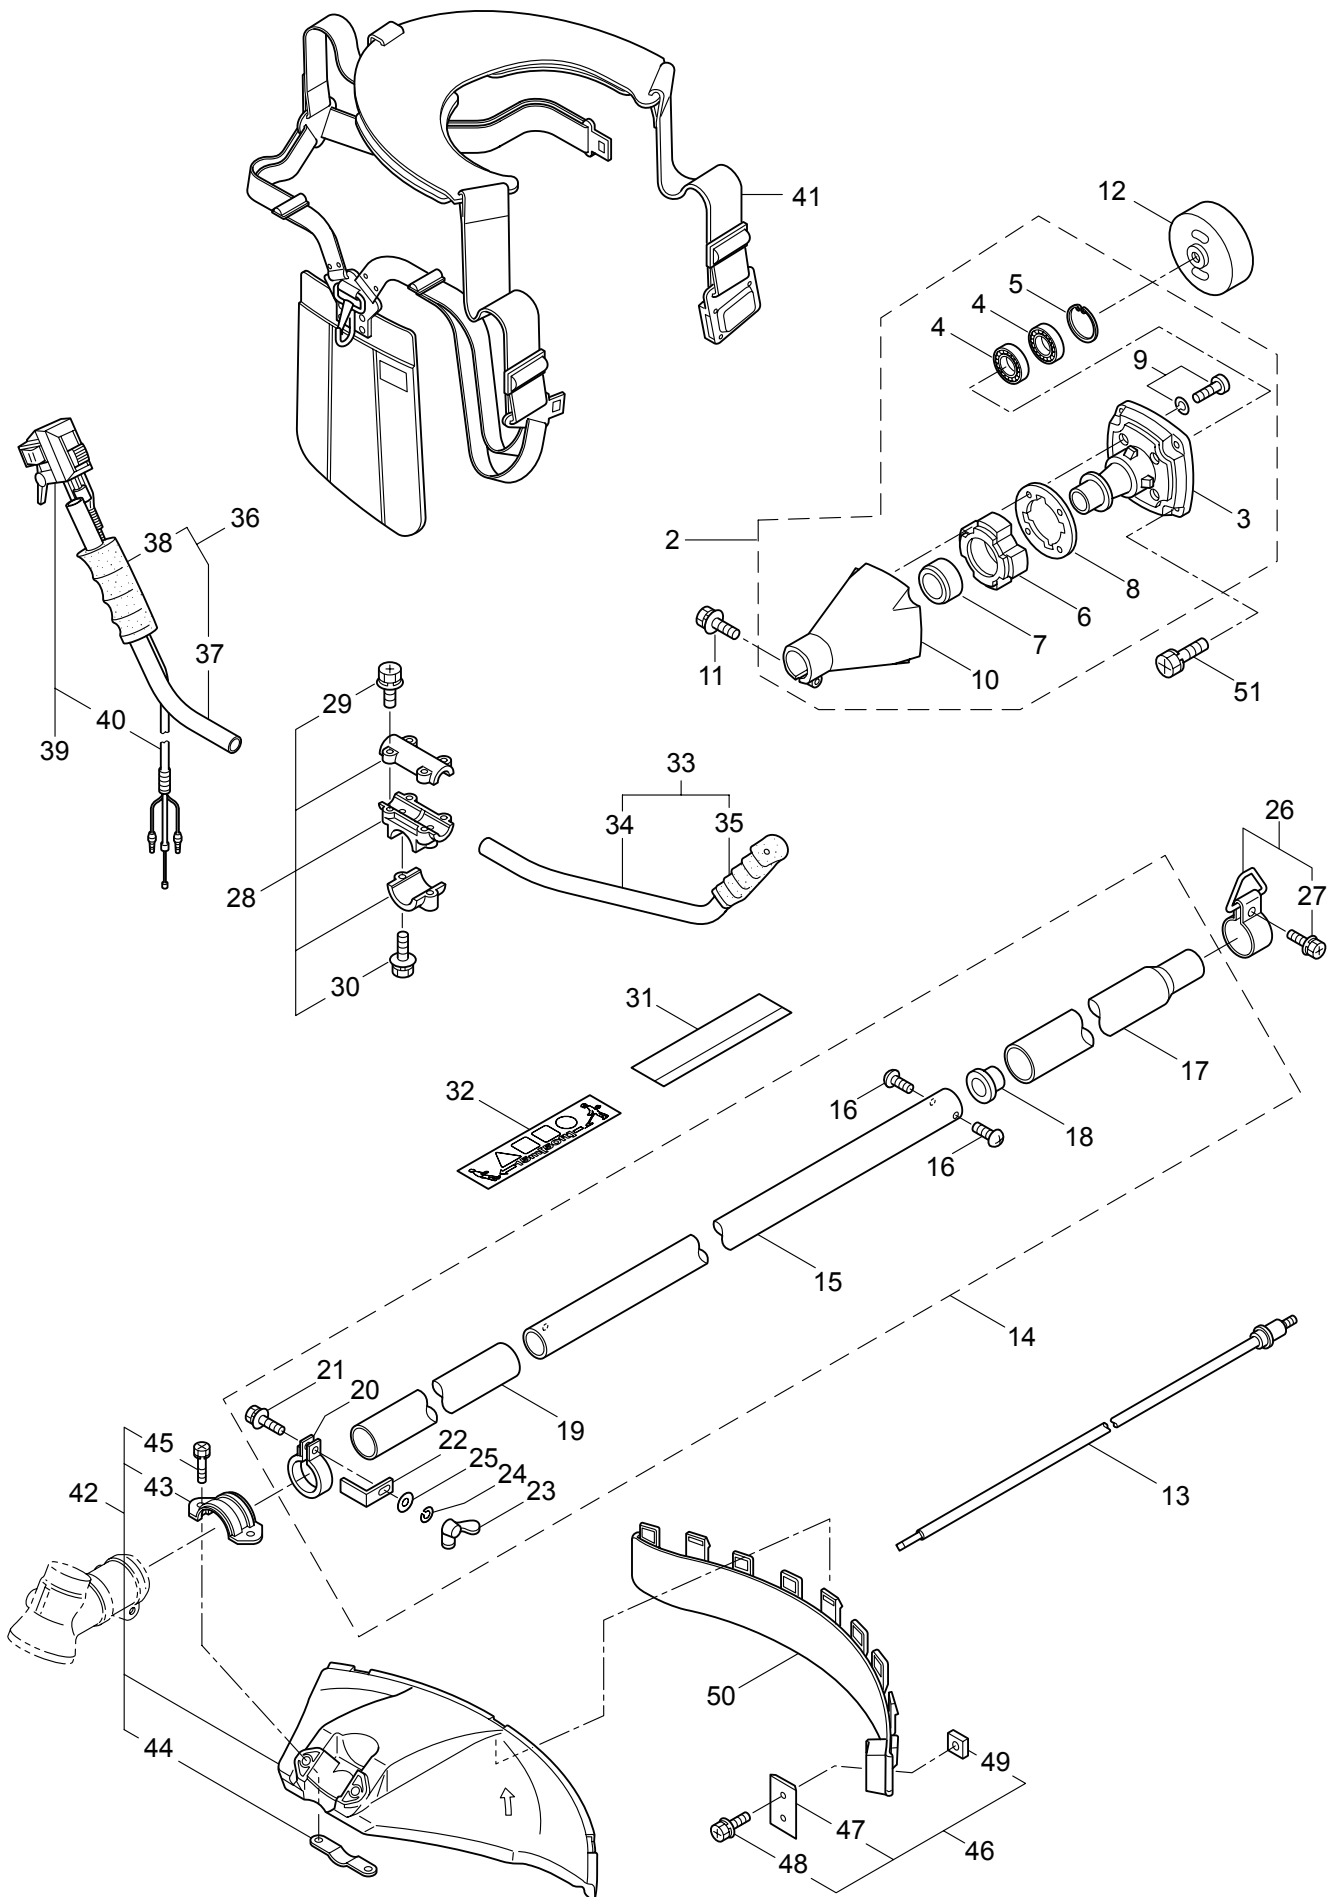


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	366093	BF50R	1	
1-2	234162	Clutch Case Ass'y	1	Incl.3-10
1-3	234143	Bearing Case	1	
1-4	140474	Bearing	2	#620ZZ
1-5	012380	Snap Ring	1	#35
1-6	217045	Buffer (A)	1	
1-7	217046	Buffer (B)	1	
1-8	217047	Washer	1	
1-9	092033	Screw	4	M5x15
1-10	227728	Driveshaft Tube Adapter	1	
1-11	092556	Bolt	1	M6x30
1-12	211203	Clutch Drum	1	
1-13	217897	Driveshaft Ass'y	1	
1-14	230150	Driveshaft Tube Ass'y	1	Incl.15-25
1-15	230076	Driveshaft Tube	1	
1-16	089580	Screw	2	M3.5x6
1-17	218324	Driveshaft Tube (B)	1	
1-18	059257	Pipe Base	1	
1-19	218325	Sleeve	1	
1-20	218237	Stopper	1	
1-21	092556	Bolt	1	M6x30
1-22	224995	Plate	1	
1-23	054990	Butterfly Nut	1	
1-24	126568	Spring Washer	1	M6
1-25	127239	Washer	1	M6
1-26	220007	Hanging Bracket Ass'y	1	Incl.27
1-27	089743	Bolt	1	M6x15
1-28	560051	Bracket Ass'y	1	Incl.29,30
1-29	092554	Bolt	4	M6x25
1-30	092556	Bolt	2	M6x30
1-31	560082	Label	1	BF50R
1-32	213750	Label	1	Caution
1-33	560056	Handle Ass'y-Left	1	Incl.34,35
1-34	560057	Handle	1	
1-35	217904	Handle Grip	1	
1-36	560058	Handle Ass'y-Right	1	Incl.37,38
1-37	560059	Handle	1	
1-38	217907	Handle Grip	1	
1-39	222152	Throttle Trigger	1	Incl.40
1-40	226573	Wire Ass'y	1	
1-41	228086	Hanging Strap Ass'y	1	
1-42	228303	Safety Cover Ass'y	1	Incl.43-45
1-43	223179	Bracket	1	
1-44	223180	Threaded Bracket	1	
1-45	092555	Bolt	2	M6x30

1. BF50R
MAIN BODY

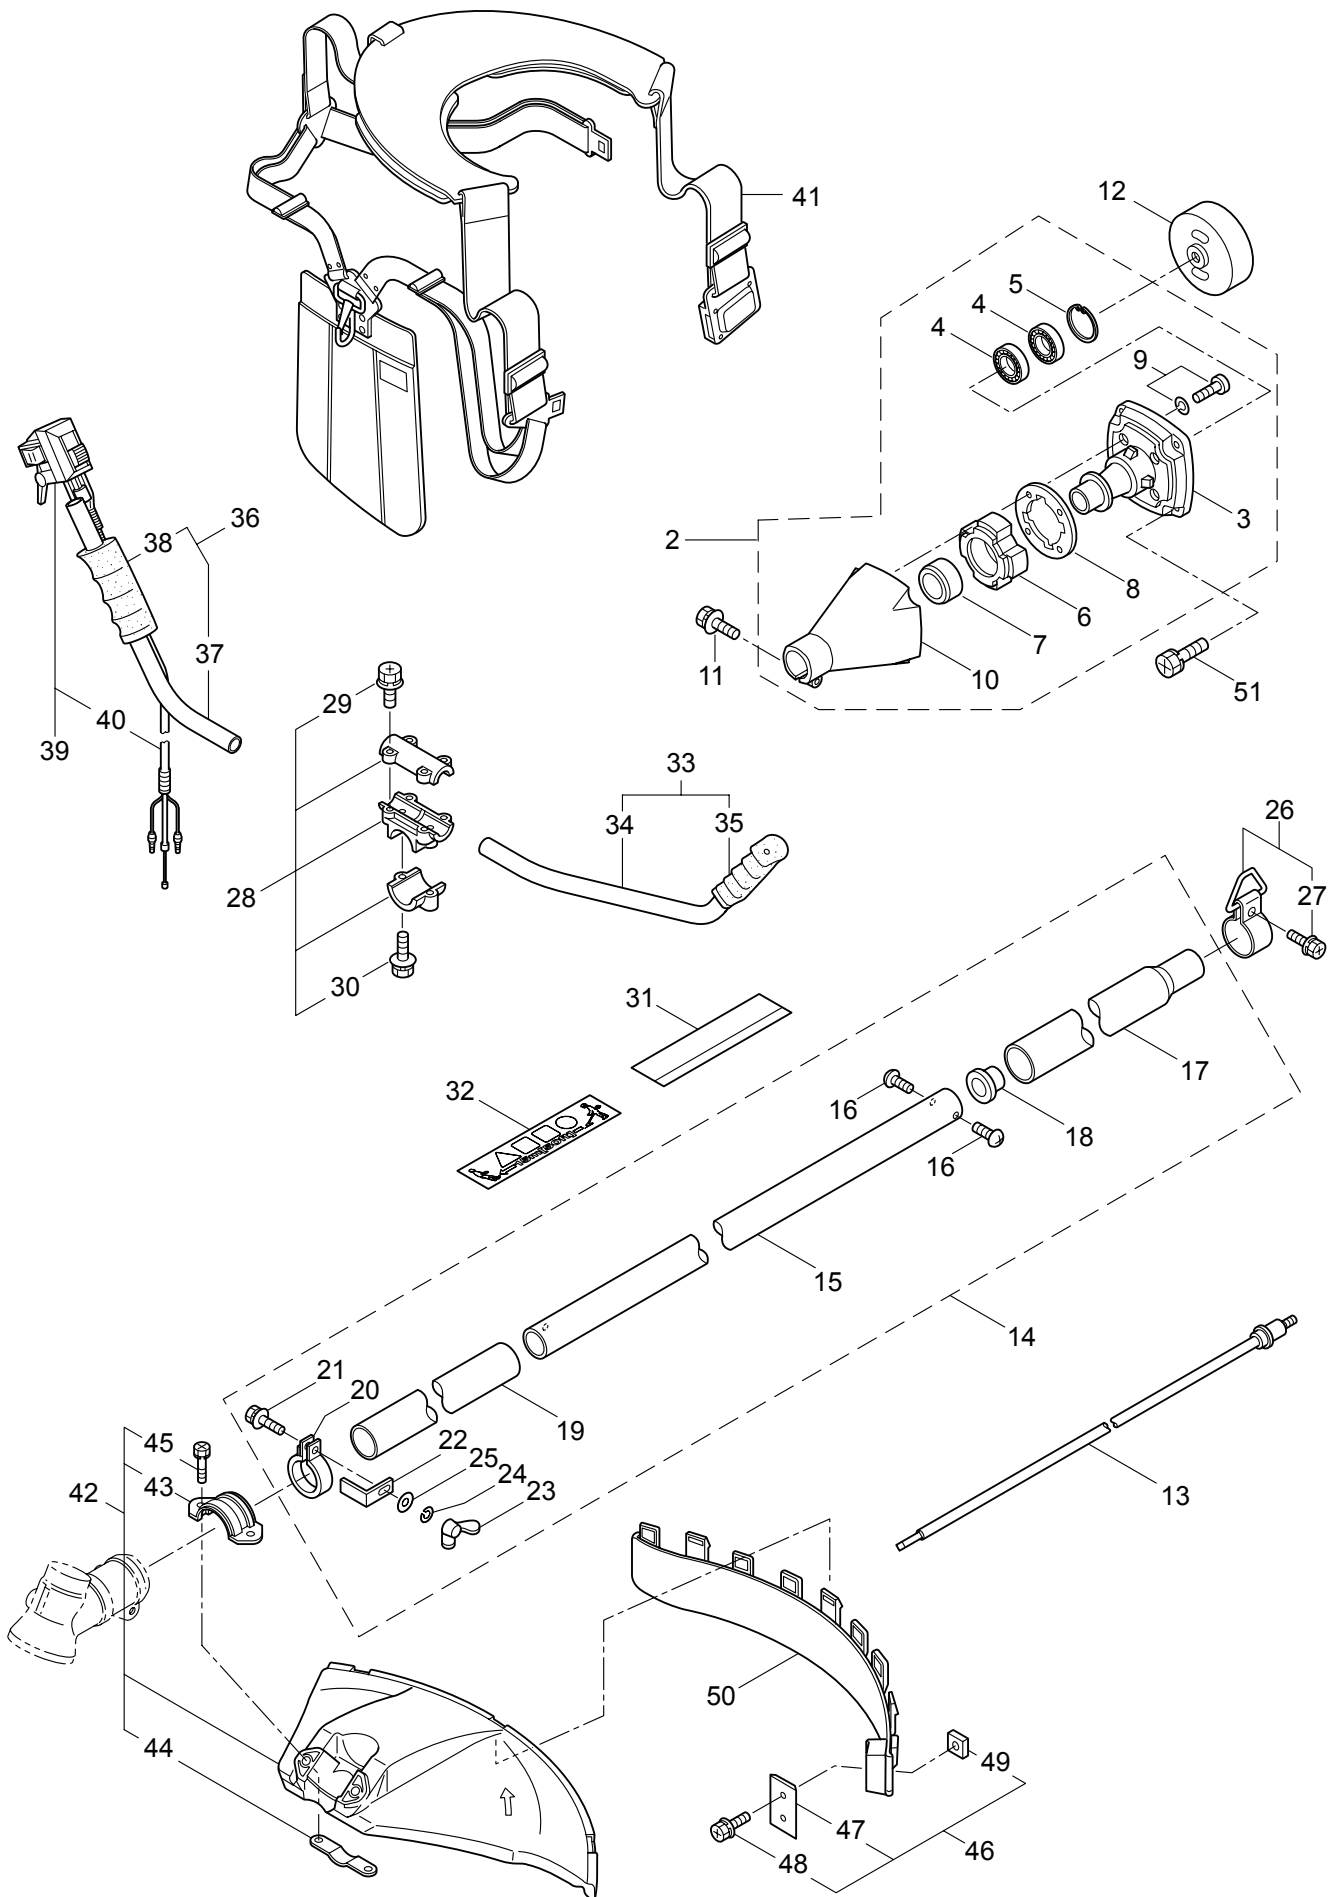


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-46	230789	String Cutter Ass'y	1	Incl.47-49
1-47	230747	String Cutter	1	
1-48	817002	Bolt	1	M5x20
1-49	228325	Nut	1	
1-50	230748	Cover Extention	1	
1-51	092552	Bolt	4	M6x20

2. BF50R
GEARCASE

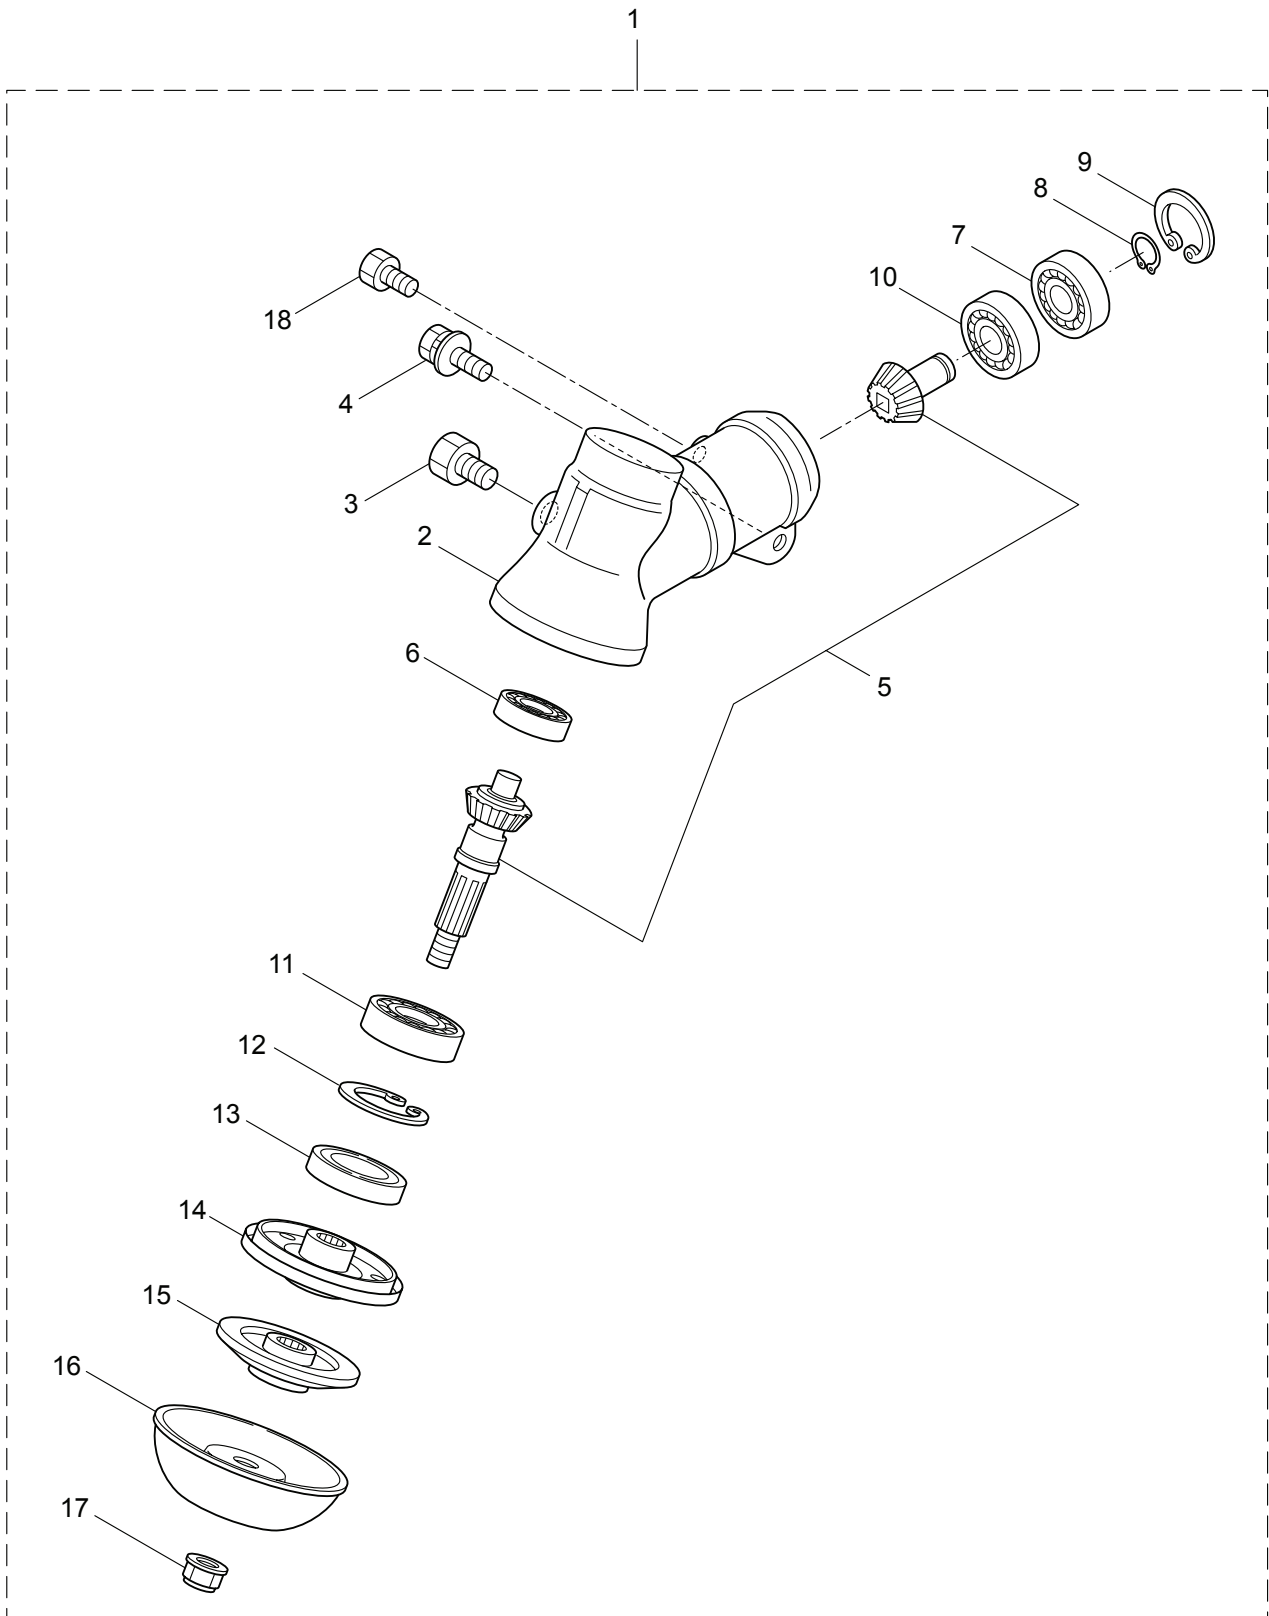


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	232919	Gearcase Ass'y	1	Incl.2-18
2-2	232833	Gearcase	1	
2-3	234109	Bolt	1	M8x8
2-4	092556	Bolt	1	M6x30
2-5	234349	Gear Set	1	
2-6	014490	Bearing	1	#6000
2-7	106933	Bearing	1	#6000Z
2-8	014210	Snap Ring	1	#10
2-9	054676	Snap Ring	1	#26
2-10	014490	Bearing	1	#6000
2-11	012544	Bearing	1	#6202
2-12	012380	Snap Ring	1	#35
2-13	232049	Oil Seal	1	D21355
2-14	232322	Bracket A Ass'y	1	
2-15	232052	Bracket B	1	
2-16	230849	Stabilizer	1	
2-17	232920	Nut	1	M10x1.25
2-18	089747	Bolt	1	M6x12

3. BF50R ENGINE

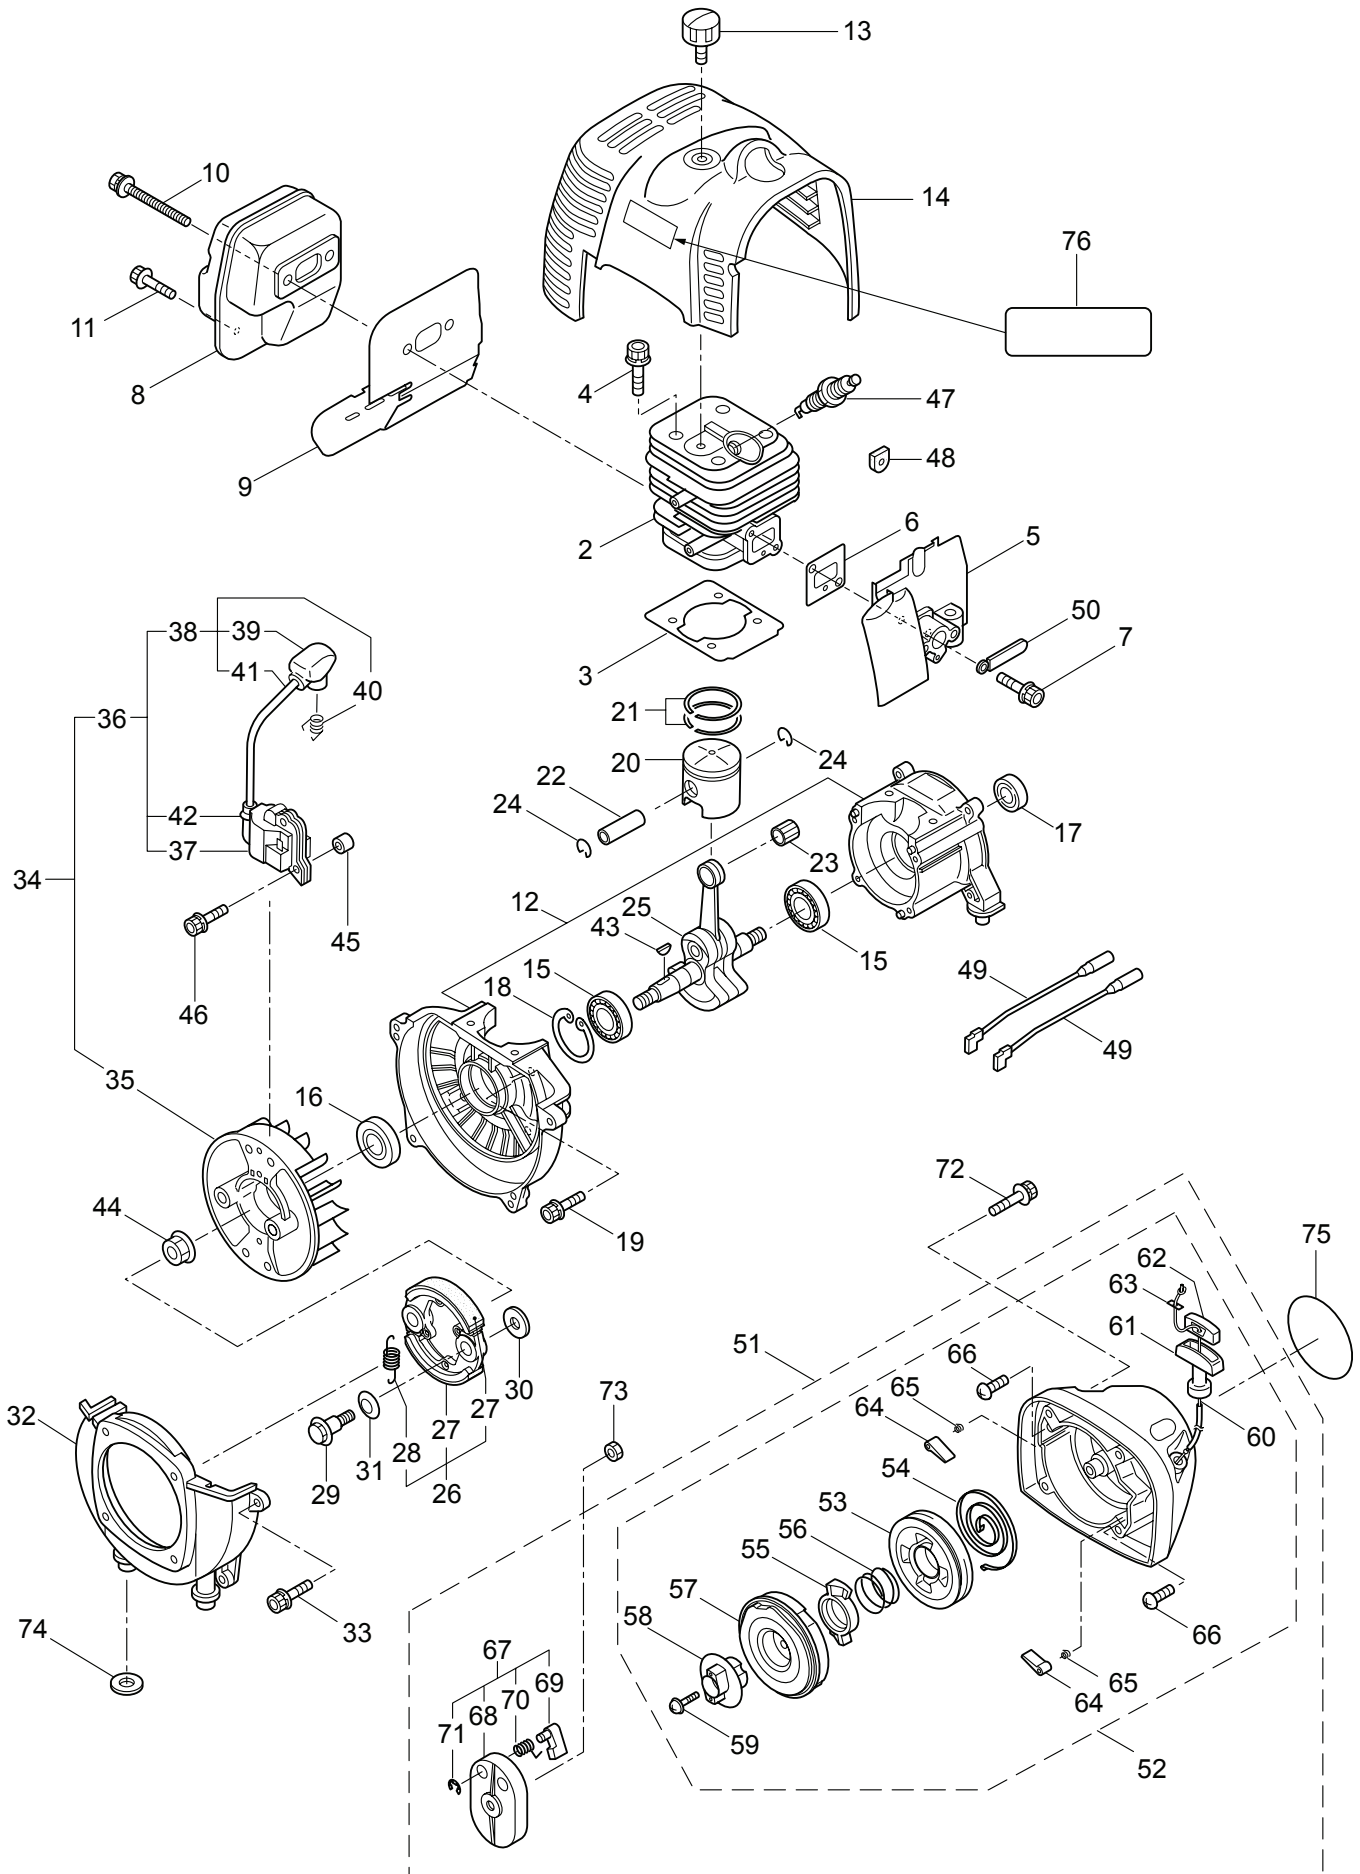


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	858919	Engine	1	NE500TH/06
3-2	283076	Cylinder	1	New gasket required
3-3	282259	Gasket	1	
3-4	261612	Cap Screw	4	M5x30
3-5	282261	Insulator	1	New gasket required
3-6	282262	Gasket	1	
3-7	267290	Cap Screw	2	M5x20
3-8	282264	Muffler Comp.	1	
3-9	282271	Gasket	1	
3-10	266713	Cap Screw	2	M5x60
3-11	283315	Screw	1	M5x12W-12
3-12	282277	Crankcase	1	
3-13	262556	Knob	1	
3-14	282274	Top Cover	1	
3-15	262658	Bearing	2	#6202C3
3-16	262660	Oil Seal	1	TC15357
3-17	262565	Oil Seal	1	ISCD15257
3-18	012380	Snap Ring	1	#35
3-19	261612	Cap Screw	4	M5x30
3-20	283078	Piston	1	
3-21	282941	Piston Ring	2	(2)Required
3-22	262749	Piston Pin	1	
3-23	262659	Bearing, Needle	1	KTV111414EG01B2
3-24	262479	Clip, Piston Pin	2	
3-25	283038	Crankshaft/Conn.Rod Ass'y	1	
3-26	286905	Clutch Ass'y	1	Incl.27,28
3-27	286906	Clutch Shoe	2	(2)Required
3-28	286907	Spring, Clutch	1	
3-29	287092	Cap Screw	2	M8x1.25
3-30	262683	Washer	2	8x22x1.2
3-31	262682	Wave Washer	2	
3-32	282285	Fan Cover	1	
3-33	261250	Cap Screw	4	M5x20
3-34	282287	Magneto Ass'y	1	Incl.35-42
3-35	282288	Rotor/Fan	1	
3-36	282289	Ignition Coil Ass'y	1	Incl.37-42
3-37	267572	Coil	1	
3-38	282290	Spark Plug Wire Ass'y	1	Incl.39-41
3-39	282292	Plug Boot	1	
3-40	261075	Connector	1	
3-41	282291	Spark Plug Wire	1	
3-42	261072	Cap	1	
3-43	261076	Woodruff Key	1	3x10
3-44	262731	Nut, Rotor	1	M10
3-45	280381	Spacer	2	

3. BF50R ENGINE

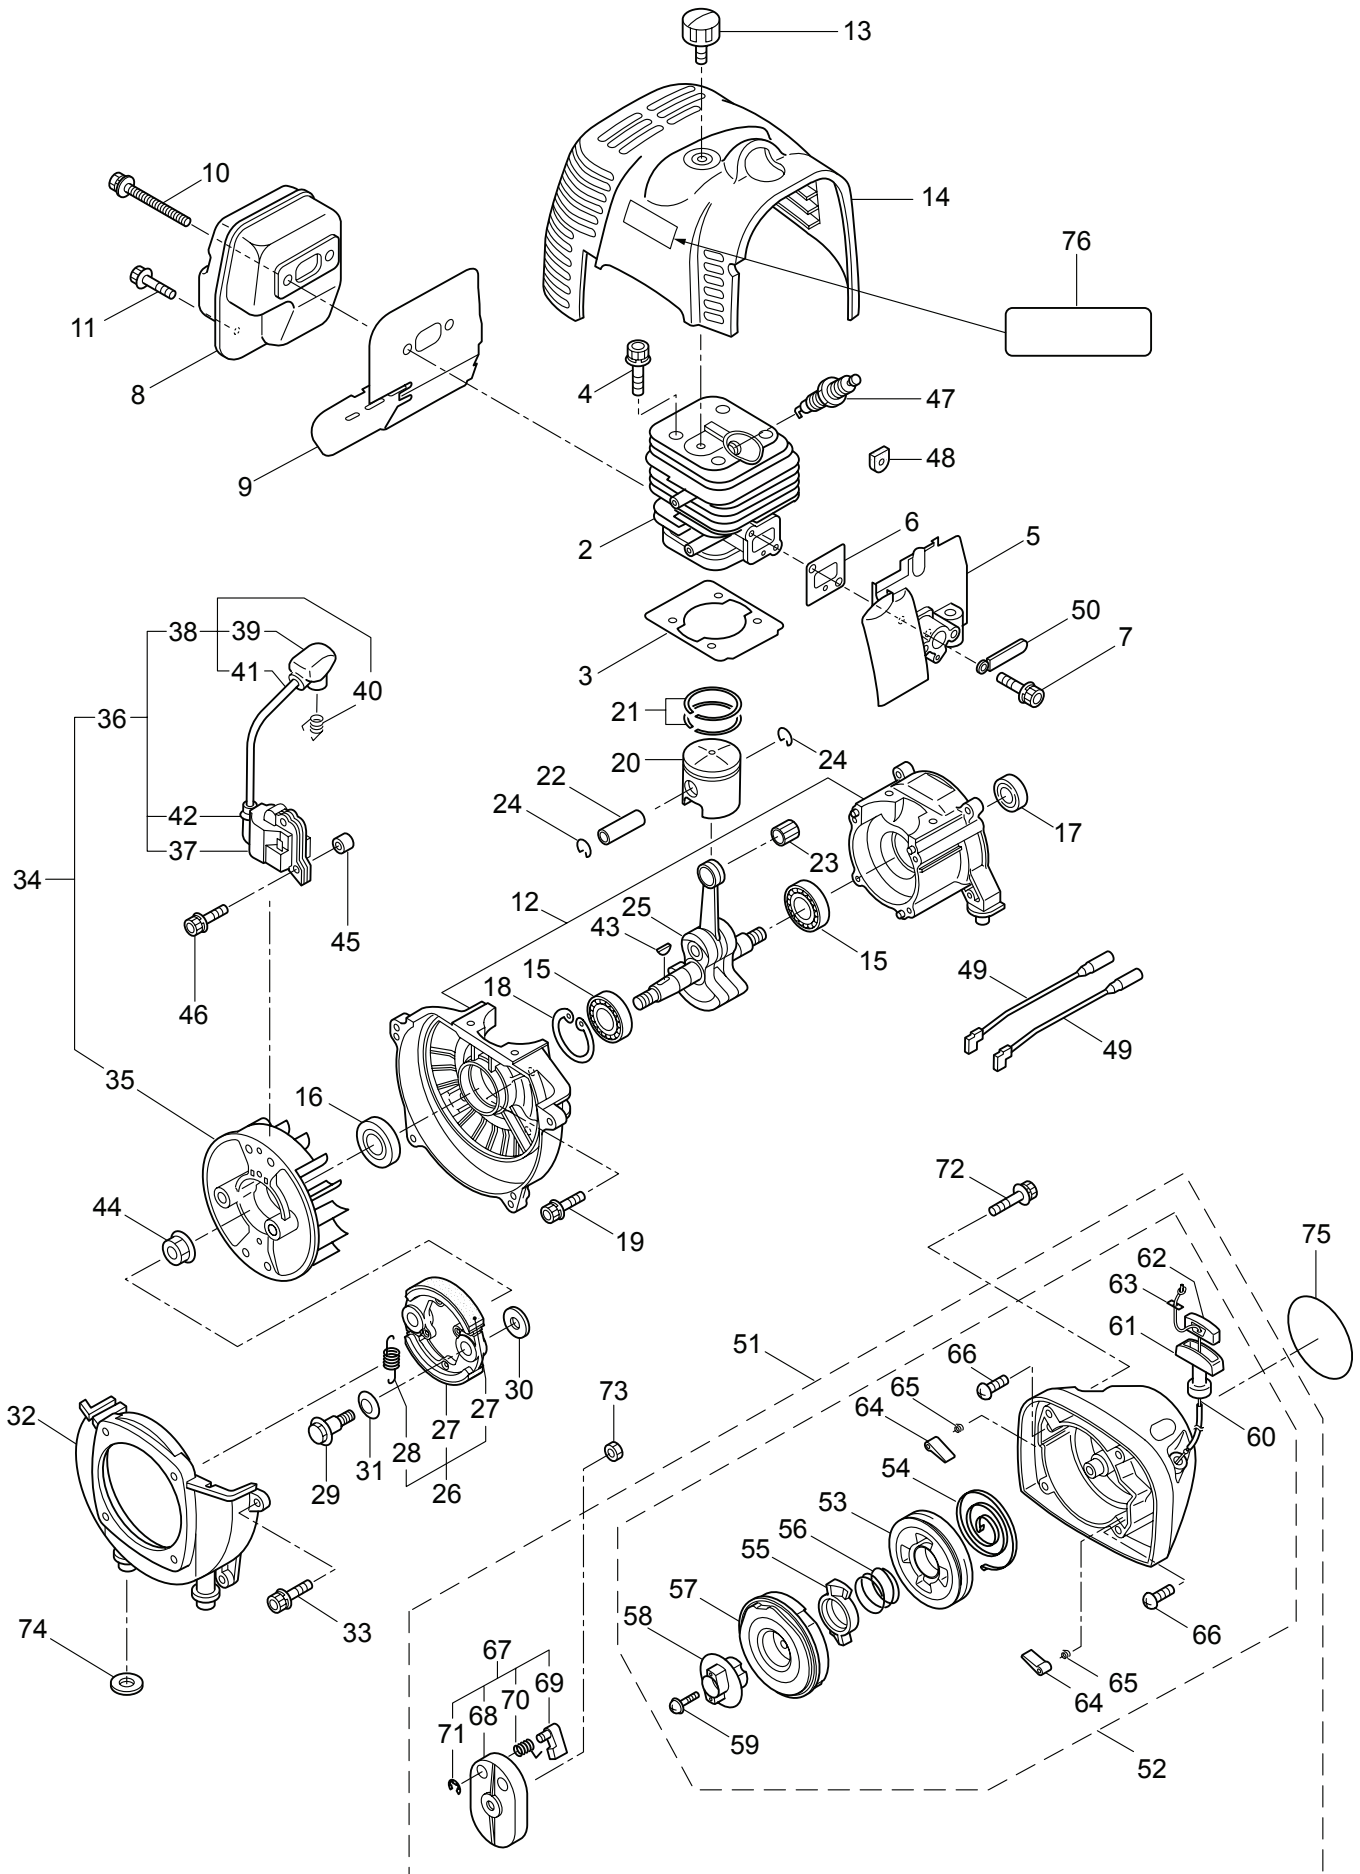


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	283669	Cap Screw	2	M4x25
3-47	261200	Spark Plug	1	NGK BPM6Y
3-48	281172	Grommet	1	
3-49	267492	Lead	2	130L
3-50	264588	Clamp	1	
3-51	282294	Recoil Starter Ass'y	1	Incl.52-71
3-52	282295	Starter Ass'y	1	Incl.53-66
3-53	280994	Pulley	1	
3-54	280995	Spiral Spring	1	
3-55	280996	Pawl	1	
3-56	280997	Return Spring	1	
3-57	283123	Spring Comp.	1	
3-58	280999	Plate	1	
3-59	281000	Set Screw	1	
3-60	281004	Starter Rope	1	
3-61	262633	Starter Grip	1	
3-62	262981	Cap	1	
3-63	281005	Rope Stopper	1	
3-64	281001	Pawl	2	
3-65	281002	Return Spring	2	
3-66	282622	Screw	2	
3-67	282623	Starter Pulley Ass'y	1	Incl.68-71
3-68	282282	Starter Pulley	1	
3-69	262636	Pawl	2	
3-70	262637	Return Spring	2	
3-71	262638	E-Ring	2	
3-72	261607	Cap Screw	4	M5x16
3-73	126990	Nut	1	M8
3-74	285735	Packing	4	
3-75	286911	Label	1	NE500
3-76	286912	Label	1	

4. BF50R
CARBURETOR, FUEL TANK

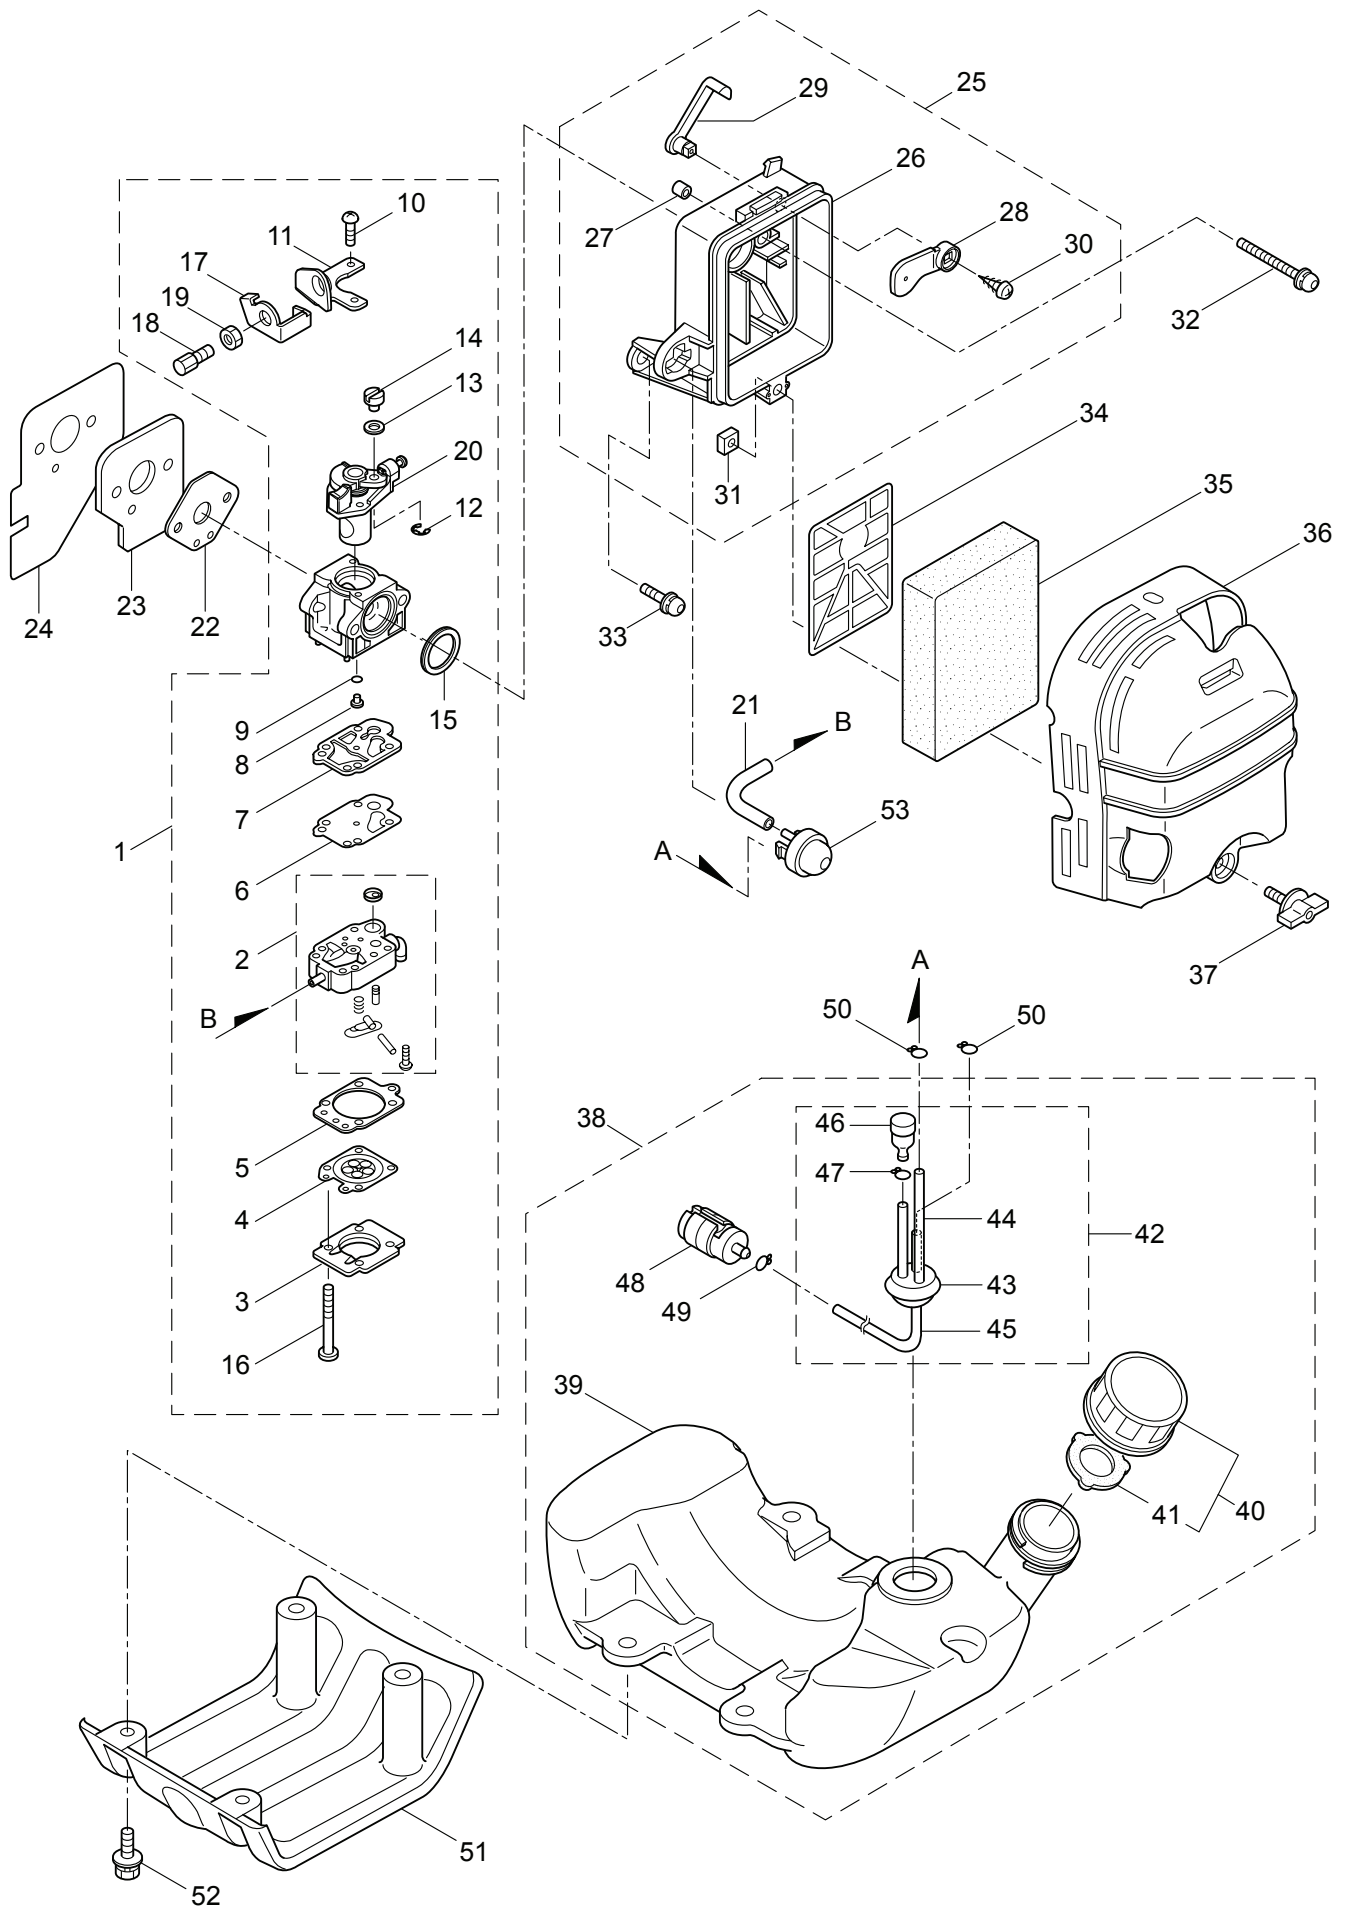







Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	288256	Carburetor Ass'y	1	Incl.2-20 New gasket required
4-2	283124	Pump Body	1	
4-3	263726	Cover Plate	1	
4-4	283905	Diaphragm, Meterring	1	
4-5	263727	Gasket	1	
4-6	262994	Diaphragm,Fuel Pump	1	
4-7	282576	Gasket	1	
4-8	283125	Main Jet	1	
4-9	261871	O-Ring	1	
4-10	261875	Screw	2	
4-11	264677	Bracket	1	
4-12	261876	E-Ring	1	
4-13	264678	Washer	1	
4-14	261658	Swivel	1	
4-15	261657	Packing	1	
4-16	263737	Screw	4	
4-17	283935	Plate	1	
4-18	265409	Adapter	1	
4-19	283936	Nut	1	M6
4-20	287728	Throttle Valve	1	
4-21	282512	Fuel Pipe	1	
4-22	282301	Gasket	1	
4-23	283086	Divider	1	
4-24	283087	Gasket	1	
4-25	282302	Case Ass'y	1	Incl.26-31
4-26	282303	Case Body	1	
4-27	282484	Sleeve	3	
4-28	282304	Valve	1	
4-29	282305	Lever	1	
4-30	269032	Screw	1	
4-31	269423	Nut	1	
4-32	262720	Cap Screw	2	M5x55
4-33	264807	Cap Screw	1	M5x16
4-34	282481	Plate	1	
4-35	282306	Element	1	
4-36	282307	Cleaner Cover	1	
4-37	281438	Knob	1	
4-38	283487	Fuel Tank Ass'y	1	Incl.39-49
4-39	282310	Fuel Tank	1	
4-40	281565	Fuel Tank Cap Ass'y	1	Incl.41
4-41	269377	Gasket	1	
4-42	282312	Fuel Pipe Ass'y	1	Incl.43-47
4-43	268065	Grommet	1	
4-44	282511	Return Pipe	1	
4-45	262649	Fuel Pipe	1	
4-46	261590	Breather	1	

4. BF50R
CARBURETOR, FUEL TANK

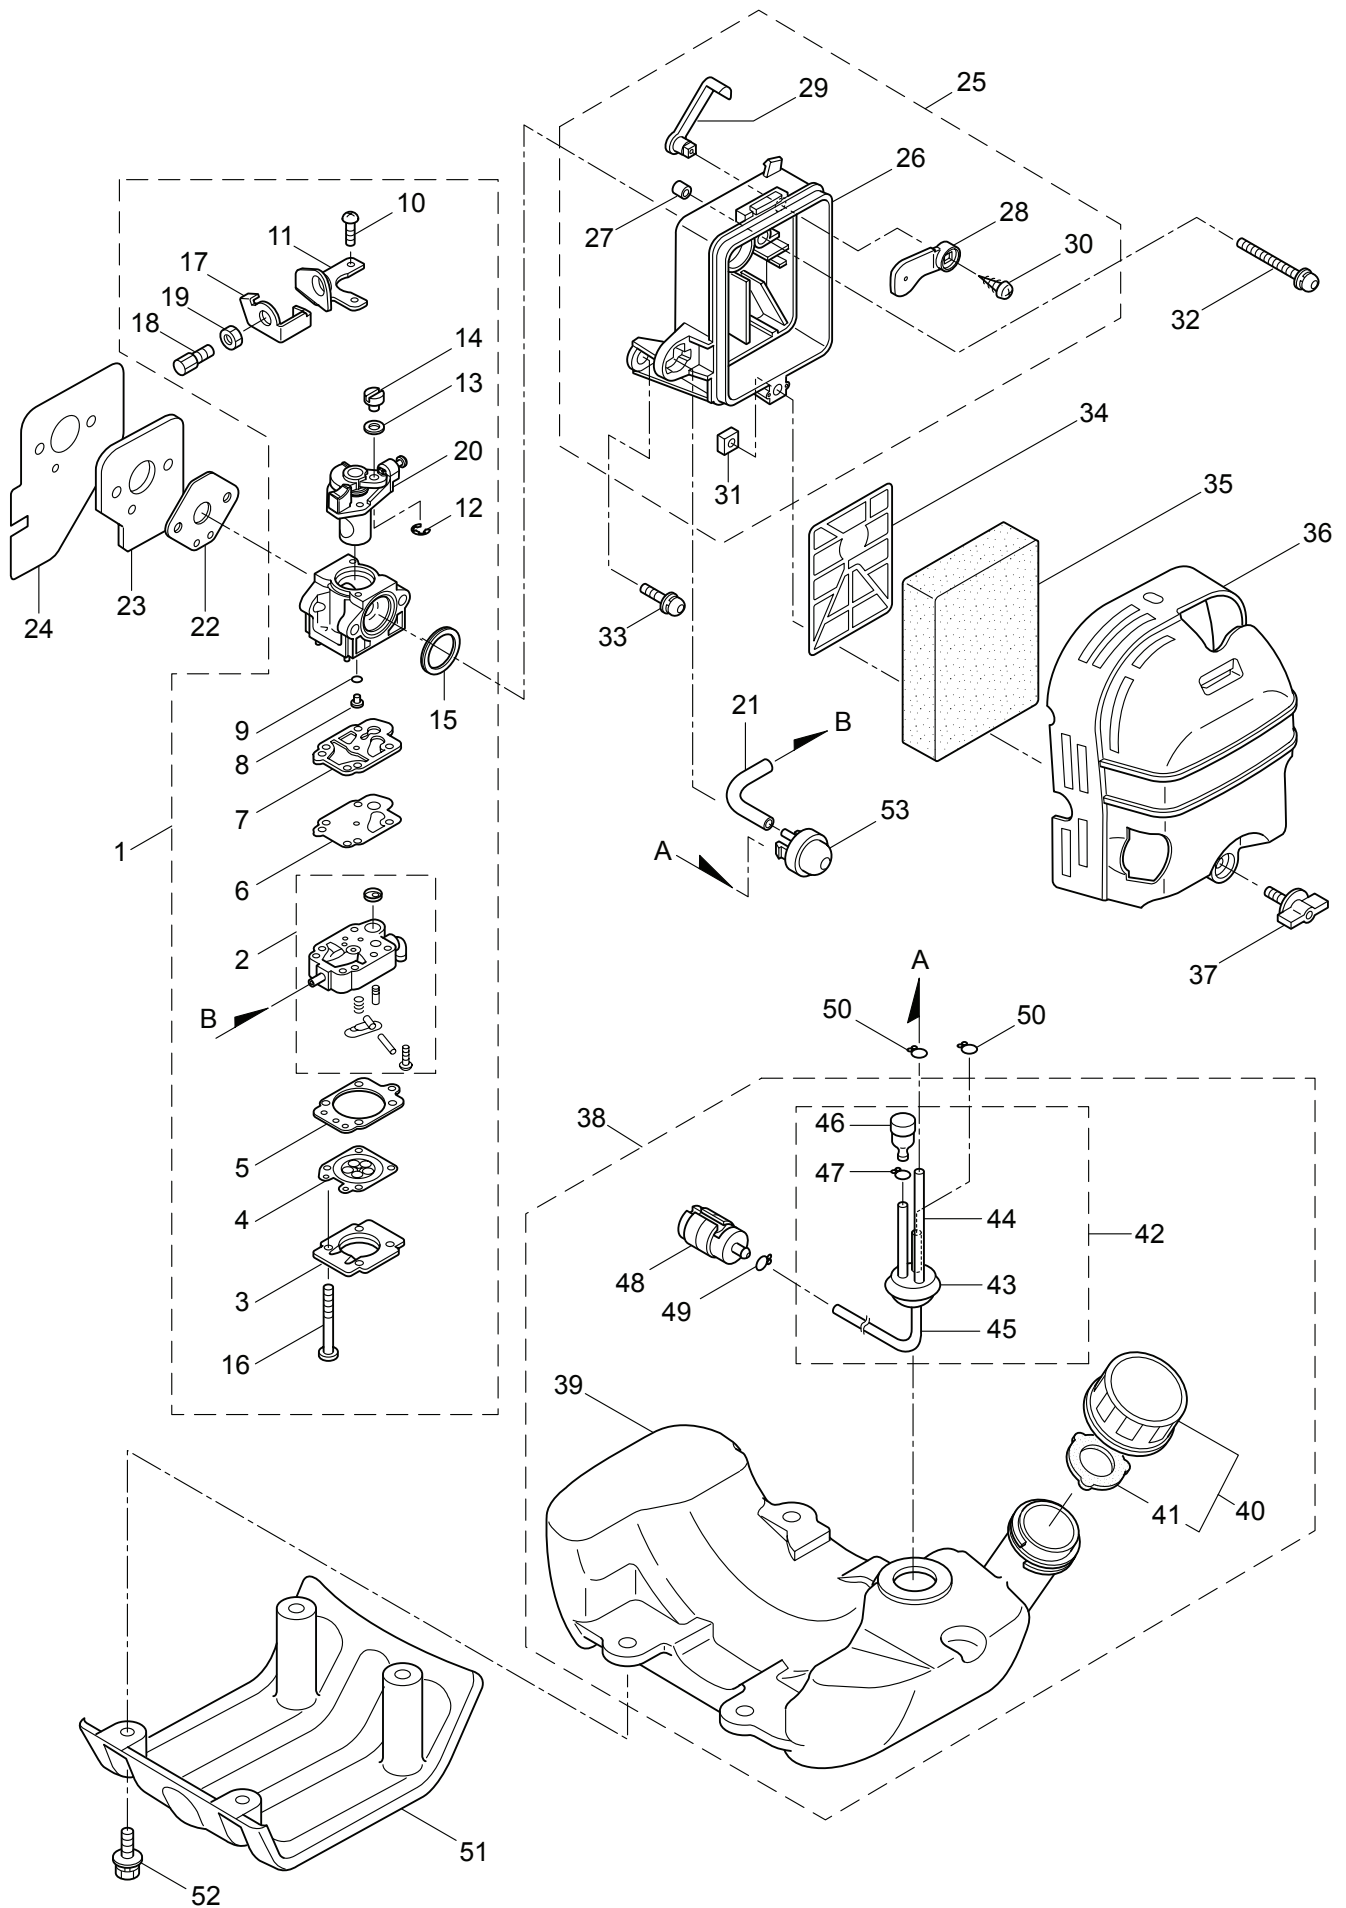

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-47	261117	Clip	1	
4-48	267328	Fuel Filter Ass'y	1	
4-49	261117	Clip	1	
4-50	261117	Clip	2	
4-51	285167	Stand	1	
4-52	281714	Cap Screw	4	M5x20
4-53	282299	Pump	1	

5. BF50R
ACCESSORIES

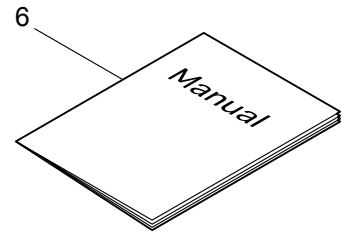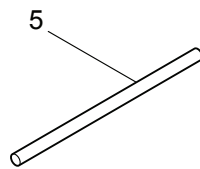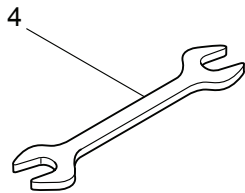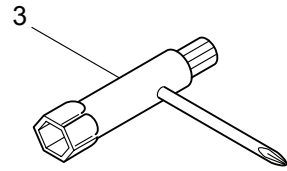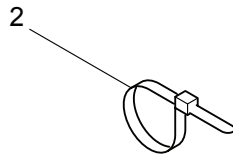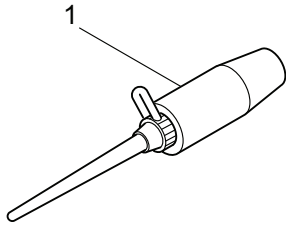

Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	211337	Grease Tube	1	
5-2	214022	Band	2	
5-3	228008	Box Spanner	1	
5-4	054756	Double-ended Wrench	1	10x13
5-5	212300	Lever Handle	1	6X100L
5-6	560075	Instruction Manual	1	